

Next Day Blinds


Installation Instructions | Roller Shades

Lift Systems: Cordless Spring, Clutch Lift with Beaded Chain

A Getting Started

The Parts: Before starting, please remove and identify the following parts required for the installation of your shades:

Cordless Spring Roller Shades

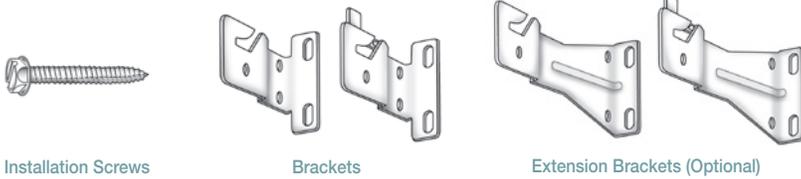


Installation Screws

Brackets

Extension Brackets (Optional)

Clutch Lift with Beaded Chain Roller

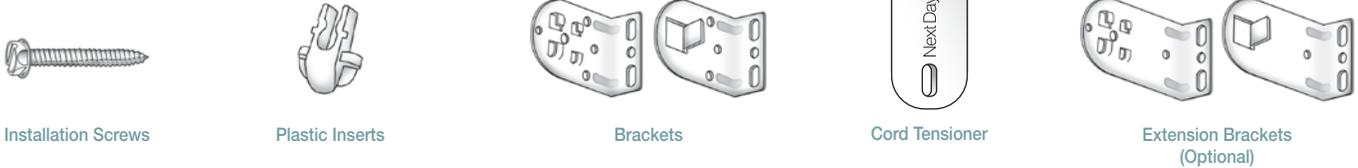

Installation Screws

Plastic Inserts

Brackets

Cord Tensioner

Extension Brackets (Optional)

B The Tools

To install your Next Day Blinds Roller Shades, you will need a few basic tools:

- Phillips Head Screwdriver*, or 1/4" nut driver*
- Measuring tape
- Pencil


* Power screwdriver or power drill with #2 Phillips attachment or 1/4" nut attachment may be used.

Important Note: Screws provided are for installation into wooden frames only. For metal surfaces, use suitable sheet metal screws and pre-drill holes. For concrete, stone, brick, or tile, use a carbide drill and appropriate anchors and screws. For wallboard or plaster, use hollow wall anchors and/or longer screws to reach framing or stud. In all cases, follow the fastener manufacturer's recommendations.

C Sorting Your Blinds

On top of the headrail of your Next Day Blinds Roller Shades, there is a sorting label. On this label, you will recognize:

1. Order size of the blind
2. Room location (If not present, info not given at time of order)
3. Whether the blind was ordered for inside mount (IB), or outside mount (OB)

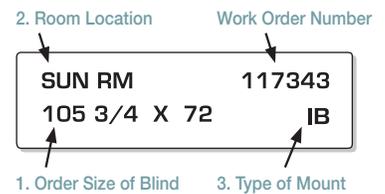

D Bracket Installation – Cordless Spring Roller Shades

Inside Mount

Important Note: Before installing the brackets make sure that the mounting surface is level. If it is not level, the shade will roll up crooked.

1. Mount the bracket with the rotating arm to the left side of the frame, slotted end up. Mount the bracket without the hinged arm to the right, slotted end down (Fig. 1). For a reverse roll, mount brackets reversed (refer to Fig. 3).
2. Make sure bracket is unlocked by rotating lock forward (Fig. 1).
3. To insert the roller into the brackets, first insert the round end pin into the right bracket (without the rotating arm). Then, insert the other side of the roller into the slot on the left bracket (with the rotating arm). Lock bracket by moving the rotating arm backward (Fig. 2).

Inside Mount Standard Roll

Allows the fabric to fall from the back of the roll and closest to the window.

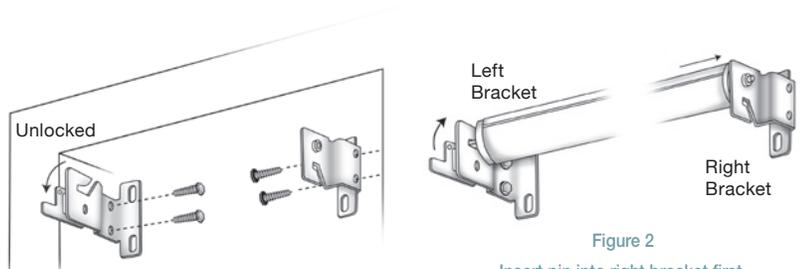


Figure 1

Figure 2

Insert pin into right bracket first. Lock bracket once shade is in place.

Inside Mount Reverse Roll

Allows the fabric to fall from the front of the roll and closest to the room.


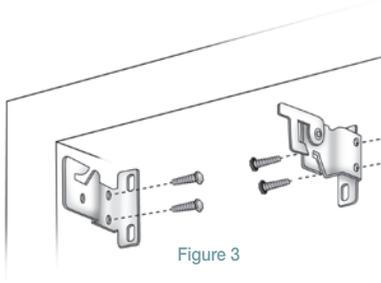


Figure 3

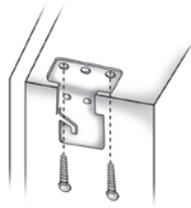

OPTION: Mounting in the ceiling or inside the window opening.

Outside Mount

1. Position the left bracket, which is the one with the rotating arm lock, at the edge of the left trim. Mount the left bracket with the slotted end up. Then, mount the right bracket to the edge of the right trim with the slotted end down (Fig. 4). For reverse roll, mount the brackets reversed (Fig. 6).
2. Before inserting the roller, make sure the left bracket is unlocked by rotating the arm lock forward (Fig. 4).
3. To insert the roller into the brackets, first insert the round end pin into the right bracket (without the rotating arm). Then, insert the other side of the roller into the slot on the left bracket (with the rotating arm). Lock bracket by moving the rotating arm backward (Fig. 5).

Outside Mount Standard Roll

Allows the fabric to fall from the back of the roll and closest to the window.

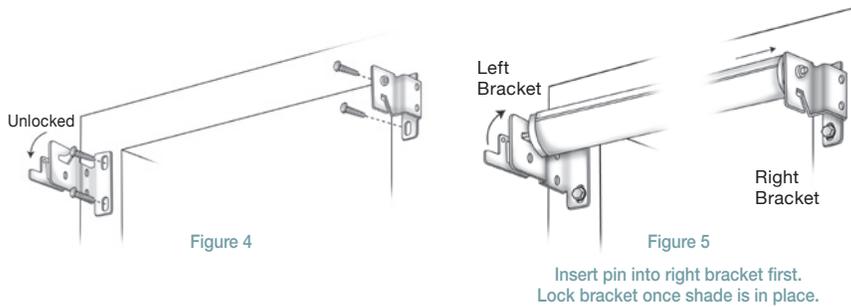


Figure 4

Figure 5

Insert pin into right bracket first. Lock bracket once shade is in place.

Outside Mount Reverse Roll

Allows the fabric to fall from the front of the roll and closest to the room.


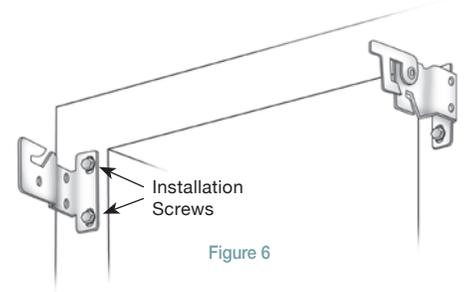


Figure 6

E Bracket Installation - Clutch Lift with Beaded Chain Roller Shades

Inside Mount


1. For mounting inside of a window frame, place the cord side bracket (bracket with metal protruding tab) on cord placement side. Drive screws through the side screw holes and into the side of the frame (Fig. 1).
2. Repeat the process with the other bracket (bracket that requires plastic insert) on the other side of the window frame.
3. Once both brackets are installed into the frame, insert the plastic insert into the non-clutch side bracket (Fig. 2).
4. To insert the roller into the brackets, first insert the clutch side with the metal protruding tab (non-rounded end) into the clutch (Fig. 3).
5. Then, insert the other side with the rounded pin into the bracket with the plastic insert (Fig. 3).

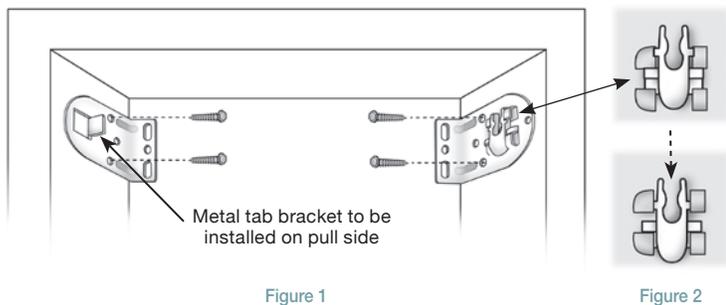

Metal tab bracket to be installed on pull side

Figure 1

Figure 2

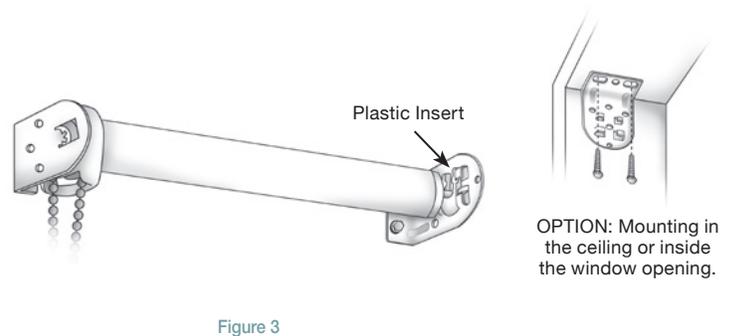


Plastic Insert

Figure 3

OPTION: Mounting in the ceiling or inside the window opening.

Outside Mount

1. For mounting on a window frame, place the clutch side bracket (bracket with metal protruding tab) on cord placement side. Drive screws through the front screw holes and into the front of the frame (Fig. 4).
2. Repeat the process with the other bracket (bracket that requires plastic insert) on the other side of the window frame.
3. Follow steps 3 - 5 from Inside Mount section.

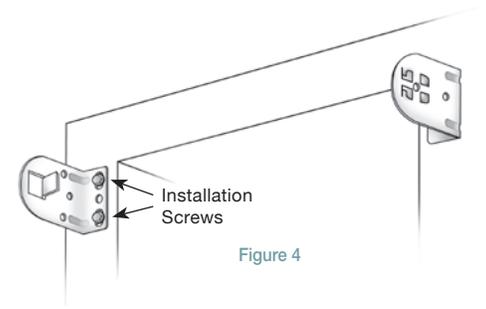


F Optional Shade Pull Installation

Shade pulls are not attached prior to shipping to protect the fabric from damage. The wood dowel and fabric are pre-drilled. Simply locate the drilled center point in the middle of the shade and push the screw through the fabric and tighten.

G Cord Tensioner Installation*

1. Lower the shade. Choose one of the three installation methods shown to position the tension device on the window frame or the wall so that the tension device and the control cord do not interfere with shade operation.
2. The control cord must be taut but still operable. Do not allow for any slack. Do not twist or cross the control cord.

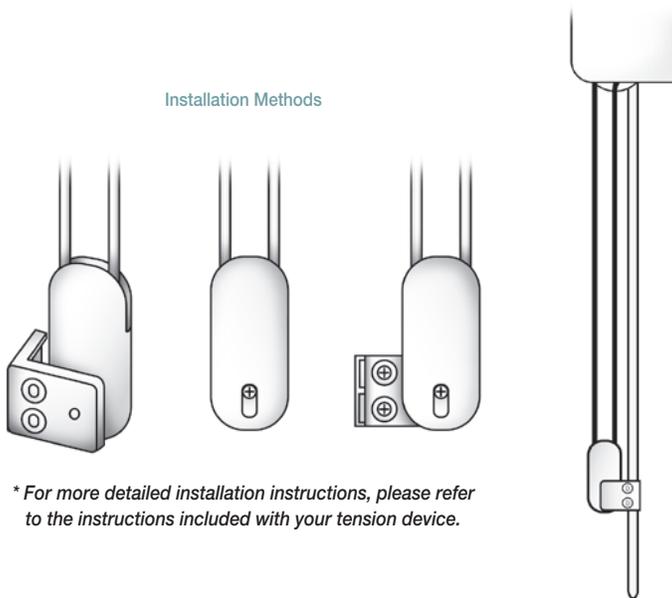

Child Safety

At Next Day Blinds child safety is first. All of our products are fitted with the highest quality components that provide the most complete safety measures in the industry. Our Cordless Spring Roller Shades for example, have no cord controls that could present safety issues. Our Clutch Lift with Beaded Chain Roller Shades are finished with a beaded chain that can be adjusted for height and anchored with a cord tensioner for child safety.

Cleaning and Care

In order to keep your window treatments looking new, follow the recommended methods for care and maintenance. Regular care will result in better appearance and performance from your window coverings.

Dusting	Hand-Held Vacuum	Compressed Air	Hair Dryer	Spot Cleaning	Water Immersion	Ultrasonic Cleaning
X	X	X	X	X		

www.NextDayBlinds.com | 800.963.9832