
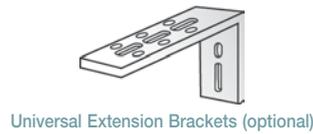


Next Day Blinds

Installation Instructions | Roller Shades Lift Systems: for Premium Cordless

A Getting Started

The Parts: Before starting, identify whether your product has a decorative cassette or no cassette—your parts will vary based on this. Remove and identify the parts required for the installation of your shades:

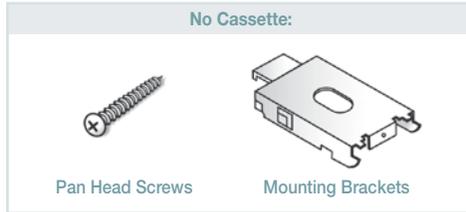

B The Tools

To install your Next Day Blinds Roller Shades, you will need a few basic tools:

- Phillips Head Screwdriver*, or 1/4" nut driver*
- Measuring tape
- Pencil


* Power screwdriver or power drill with #2 Phillips attachment or 1/4" nut attachment may be used.

Important Note: Screws provided are for installation into wooden frames only. For metal surfaces, use suitable sheet metal screws and pre-drill holes. For concrete, stone, brick, or tile, use a carbide drill and appropriate anchors and screws. For wallboard or plaster, use hollow wall anchors and/or longer screws to reach framing or stud. In all cases, follow the fastener manufacturer's recommendations.

C Sorting Your Shades

On top of the headrail of your Next Day Blinds Roller Shade, there is a sorting label. On this label, you will recognize:


1. Order size of the shade
2. Room location (If not present, info not given at time of order)
3. Whether the shade was ordered for inside mount (IB), outside mount (OB), or side mount (EM)

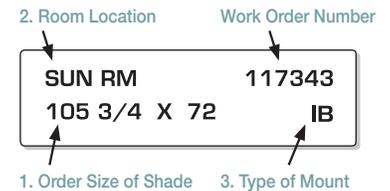

D Bracket Spacing

The brackets should be installed where the centerlines are noted in the illustration. Depending on the width of the roller shade, necessary additional brackets may be evenly spaced between the two end brackets.

Shade Width	Number of Brackets
To 40"	2
40" To 72"	3
72" To 84"	4
84" To 96"	5

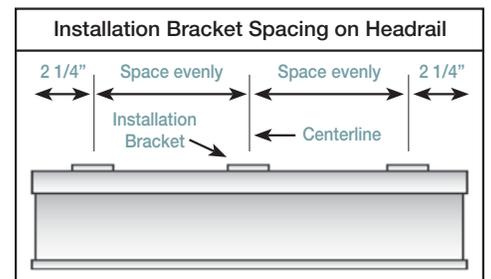

E Bracket Installation

Inside Mount (IB)

With Cassette: Refer to Figure 1 for bracket installation details.

No Cassette: Make sure that the screw head is fully recessed inside the clear plastic part of the mounting bracket (Fig. 2).

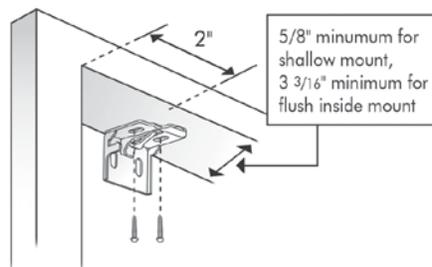


Figure 1
With Cassette: Smooth or Fabric Insert

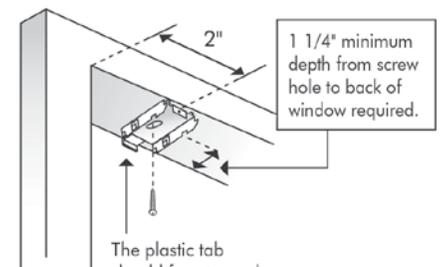


Figure 2
No Cassette

Outside Mount (OB)

Important Note: Make sure your mounting surface is level. If the headrail does not sit level, the fabric will not roll up evenly which could damage the edges of the fabric.

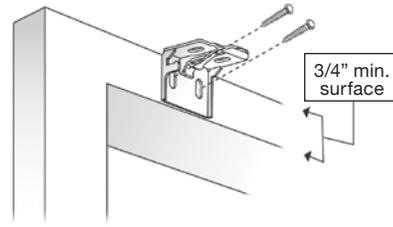


Figure 3
With Cassette: Smooth or Fabric Insert

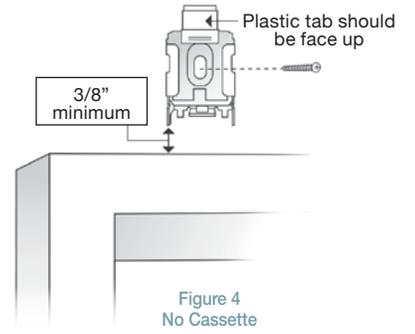


Figure 4
No Cassette

Outside Mount (OB) with Extension Brackets (Optional)

Extension Brackets are used to project the back of the shades up to 2 1/2" from the mounting surface (Fig. 5). Attach the Standard Mounting Bracket to the Extension Bracket with the nut and bolt provided (Fig. 6).

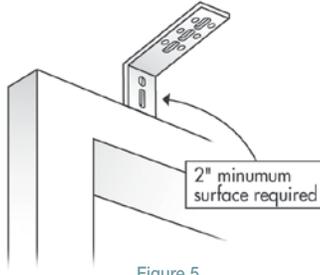


Figure 5

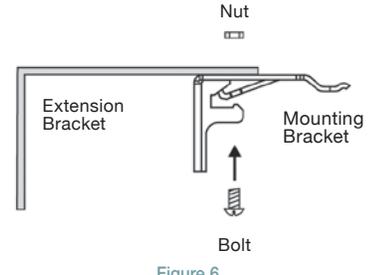


Figure 6

Side Mount (EM)

Measure from window sill up to desired mounting position on each side of the window frame. Mark position. Mount Side Mount Brackets on each side of window frame as shown (Fig. 7). Make sure to confirm that headrail will sit perfectly level. Once Side Mount Brackets are installed and properly positioned, attach the Standard Mounting Brackets using the nuts and bolts provided (Fig. 8).

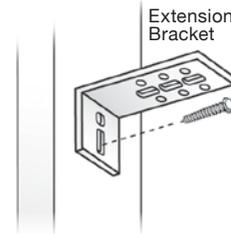


Figure 7

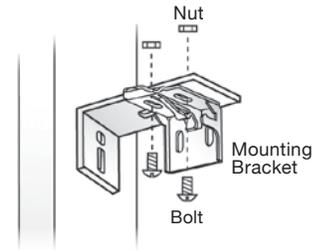


Figure 8

F Installing Your Roller Shades into the Brackets

With Cassette

Push the headrail back until it is fully engaged (Fig. 1 and Fig. 2).

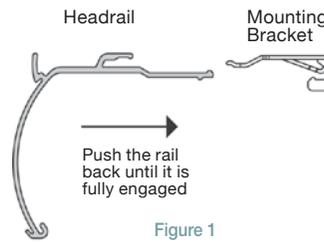


Figure 1

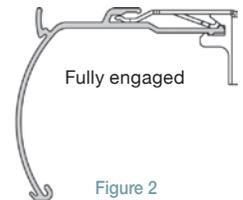


Figure 2

No Cassette

Inside Mount or Extension Bracket

Hook the rail onto the front of the bracket, push back on spring and rotate it until the back of the rail securely snaps into place (Fig. 3).

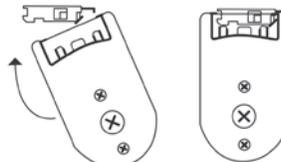


Figure 3 (Side View)

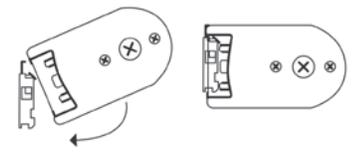



Figure 4 (Side View)

Outside/Wall Mount

Hook the rail onto the top of the bracket, push down on the spring and rotate it until the back of the rail securely snaps into place (Fig. 4).


G Installing Handle

To install the handle, find the middle of the bottom rail. Insert the top two prongs of the handle into the top lip of the bottom rail. Gently push down and back on the handle so that the bottom two prongs snap the handle into place.

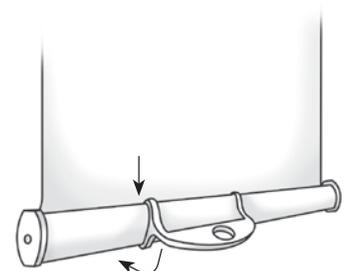

H Installing Hold Down Bracket (Optional)

Hold Down Brackets are mounted with supplied screws. With the shade at its proper drop, place the pin of each Hold Down into the hole in each End Cap and mark the screw holes. Make sure the pins are level and aligned. Raise the shade, then screw the Hold Down Bracket into the mounting surface.

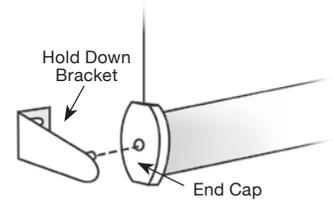

I Shade Adjustments (Optional)

Once installed, raise and lower your shade to see if any adjustments are needed to the shade's tension or upstop position. If no adjustments are needed, skip to Step J.

Adjusting these two settings will require access to screws located at the ends of your headrail (if you have a decorative cassette, you can access these screws through holes in your cassette's end cap). If your shade is inside mounted, the screw (or end cap hole) may be obscured by your window frame. In this case, remove the shade's headrail from the brackets and perform the necessary adjustments.

Tension Adjustment

First, identify which type of roll you have (see Fig. 1). On a standard roll, the adjustment is made on the left end of the shade. On a reverse Roll, the adjustment is made on the right end.

If the shade does not go all the way up, you will need to increase the spring tension (see Fig. 2).

If the shade goes up too quickly, you will need to decrease the spring tension (see Fig. 3).

Note: Make sure that your shade is all the way up, and use one hand to hold the roll in place while turning the screw with your other hand using a screwdriver (see Fig. 4).

Upstop Adjustment

First, identify which type of roll you have (see Fig. 1). On a standard roll, the adjustment is made on the right end of the shade. On a reverse roll, the adjustment is made on the left end.

Retract the shade and let it rise to its default top stopping point. If you do not like where the upstop is set, it can be adjusted. To lower or raise the upstop position of the bottom rail, adjust using a screwdriver (see Fig. 5).

Note: When setting the upstop, DO NOT allow the bottom rail to jam between the installation brackets. This will result in damage to the fabric.


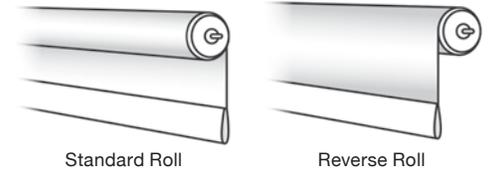


Figure 1



Increase Tension:
Rotate Clockwise

Figure 2

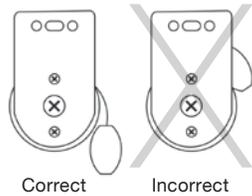

Decrease Tension:
Rotate Counter-clockwise

Figure 3

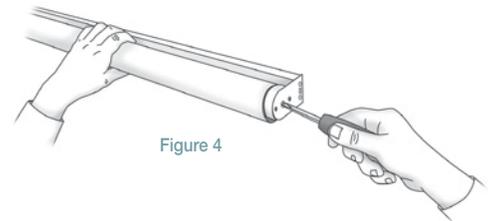


Figure 4



Lower Bottom Rail:
Rotate Clockwise




Raise Bottom Rail
Rotate Counter-clockwise

Figure 5

J Apply End Cap Covers (Optional)

This step applies only if you chose the decorative cassette option with your order.

Once installation and any necessary tension adjustments have been completed, apply the included adhesive end cap covers over the holes at each end of the cassette. If the end cap hole is not visible (inside mount), this step is optional.

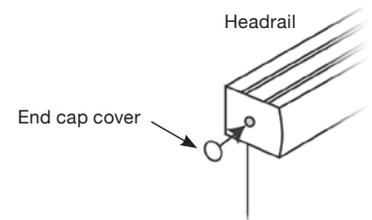

Child Safety



Next Day Blinds is committed to incorporating the latest and most effective child-safe technologies in our products. Without any exposed cording this product offers the assurance you need for window coverings in rooms accessed by young children.

Cleaning and Care

In order to keep your window treatments looking new, follow the recommended methods for care and maintenance. Regular care will result in better appearance and performance from your window coverings.

Dusting	Hand-Held Vacuum	Compressed Air	Hair Dryer	Spot Cleaning	Water Immersion	Ultrasonic Cleaning
X	X	X	X	X		