


Step One: Inside or Outside?

INSIDE MOUNT

As a best-application practice, we generally recommend that vertical blinds be outside mounted. In certain cases, where window or window casement depths allow, these products may be inside mounted.

Vertical Blinds require 2 3/4" of depth to install, or 4" to install fully recessed.


INSIDE MOUNT

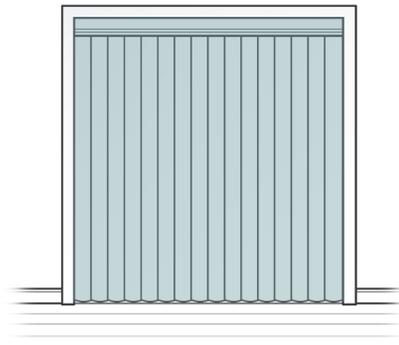

OUTSIDE MOUNT

Vertical blinds are commonly used to cover wide expanse windows and sliding glass doors. In order to properly mount vertical blinds, you need at least 1 1/4" flat mounting surface.

OUTSIDE MOUNT

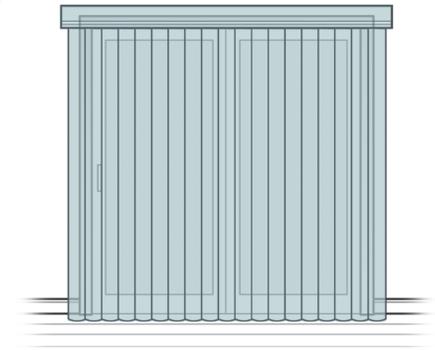


Step Two: Measure

For best results, use a steel tape measure and carefully measure to the nearest 1/8". All necessary measurement deductions are made in our factory.

INSIDE MOUNT

1. Measure width from right to left in three locations; across the top, center and bottom. **Use the narrowest width.**
2. Measure height from top to bottom in three locations; left, center and right. **Use the longest length.**
3. Order product as Inside Mount.

Note: we will make the necessary deductions.

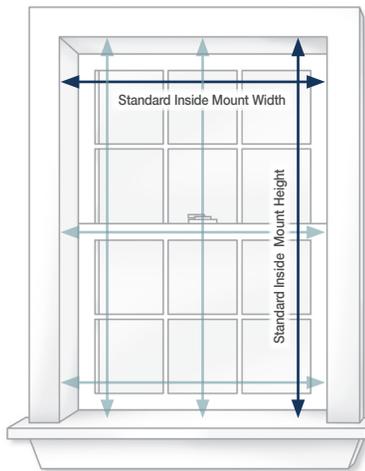

OUTSIDE MOUNT


Sliding Doors:

1. Measure the exact width from the outside edge of the trim and add a minimum of 3-4" to each side.
2. Measure the exact height from the top of the trim to the floor and add a minimum of 1 1/2". The size ordered will be the exact size of the product.

Windows:

1. Measure the exact width from outside edge to outside edge of the trim and add a minimum of 3-4" to each side.
2. Measure the exact height from outside edge of trim to either the top of the sill or the bottom of the window apron (recommended) and add a minimum of 1 1/2". The size ordered will be the exact size of the finished product.

For doors and windows with no trim, a 5-6" overlap on either side is recommended to assure privacy.

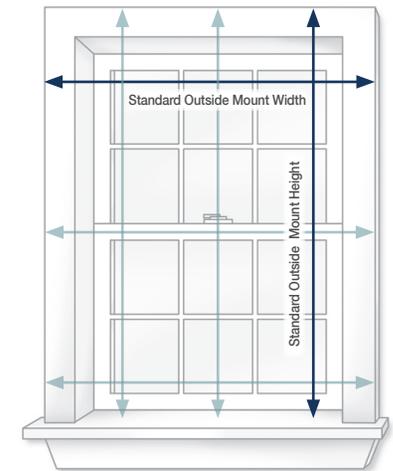

Made to order, sized to fit.

We make all necessary deductions to ensure proper fit. When ordering, please provide your exact measurements without any deductions already made.

	Depth Requirements		Finished Product Size Relative to Ordered Size			
	INSIDE MOUNT		INSIDE MOUNT		OUTSIDE MOUNT	
	Install	Fully Recess	Headrail Width	Valance Width	Headrail Width	Valance Width
Vertical Blinds (Closed Corner Valance)	2 3/4"	4"	-3/8"	-1/4"	-	+3/4"
Vertical Blinds (Rounded Corner Valance)	2 3/4"	4"	-7/8"	-1/4"	-	+1 1/4"

*Please Note: all inside mount vertical blinds will have 1/2" deducted from the height.
All outside mount vertical blinds will be manufactured at ordered height.*