

Next Day Blinds


Installation Instructions | Woven Wood Shades Lift Systems: for Cordlock, EasyLift

A Getting Started

The Parts: Before starting, please remove and identify the following parts required for the installation of your shades:



Mounting Screws

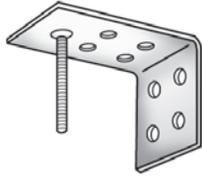


Installation Brackets



Wingnuts



Cord Tensioner
(for EasyLift)

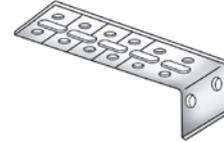

Extension Brackets
with Bolts and Nuts
(optional)

B The Tools

To install your Next Day Blinds Woven Wood Shades, you will need a few basic tools:

- Phillips Head Screwdriver*, or
- 1/4" nut driver*

* Power screwdriver or power drill with #2 Phillips attachment or 1/4" nut driver attachment may be used.


Important Note: Screws provided are for installation into wooden frames only. For metal surfaces, use suitable sheet metal screws and pre-drill holes. For concrete, stone, brick, or tile, use a carbide drill and appropriate anchors and screws. For wallboard or plaster, use hollow wall anchors and/or longer screws to reach framing or stud. In all cases, follow the fastener manufacturer's recommendations.

C Sorting Your Blinds

On the top of the headrail of your Next Day Blinds Woven Wood Shades, there is a sorting label.

On this label, you will recognize:

1. Order size of the shade
2. Room location (If not present, info not given at time of order)
3. Whether the shade was ordered for inside mount (IB), outside mount (OB), or side mount (EM)

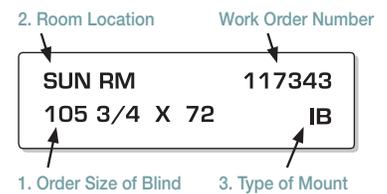

D Installation

Inside Mount (IB)

1. Place shade inside window casement as shown (Fig. 1). Installation brackets are not needed for inside mount installation.
2. Hold headrail level against the top of the casement and lower shade to make sure that bottom rail is level. Shimming may be required to level shade for out of square window casements.
3. While holding the headrail firmly against the casement, place mounting screw through the slot in the headrail. (Fig. 1)
4. Drill the screw through to attach the shade to the window casement. If shim is required make sure it is in place before tightening screw.


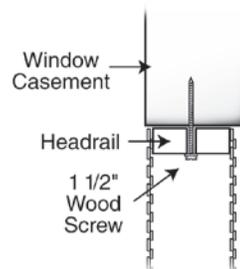


Figure 1

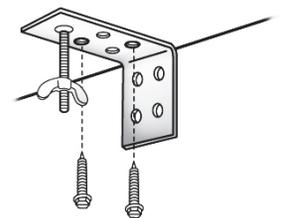

OPTION: Mounting in the ceiling or inside the window opening

Figure 2

Outside Mount (OB)

1. Place installation brackets on the edge of trim or wall (depending on how you measured the space that you want the shade to cover). Lightly mark the mounting surface for the position of the brackets. Please note, brackets will need to line up with the center of the slots in the headrail (Fig. 3).
2. Position the brackets along designated area. Using the mounting screws, drill through the bracket and into the mounting surface (window frame or wall, Fig. 4). Repeat the same step on the other side after making sure the brackets are level.
3. Once the installation bracket is secure, position the headrail of the shade so that the threaded posts are coming down through the slots in the headrail (Fig. 5).
4. Secure the headrail to the installation brackets by tightening the wing nuts.



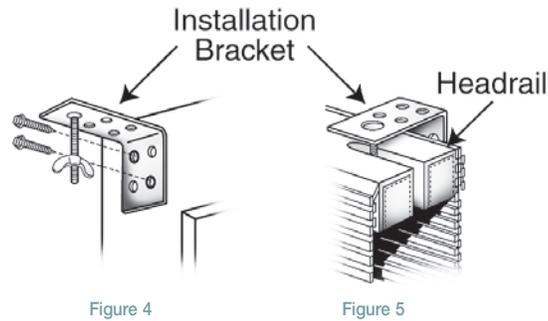


Figure 5

E Installing Extension Brackets (Optional)


Extension brackets can project the installation brackets up to 2 1/2" from the mounting surface.

1. Connect the installation brackets with the bolt and nut which are included with each extension bracket. Be sure to use the same hole on all the extension brackets, so that each installation bracket projects the same distance from the mounting surface (Fig. 1).
2. Make sure the tops of the extension brackets are perfectly horizontal and aligned at the same height and use two screws to attach to wall.

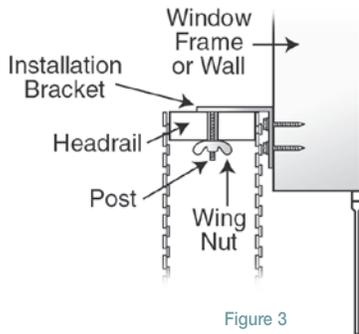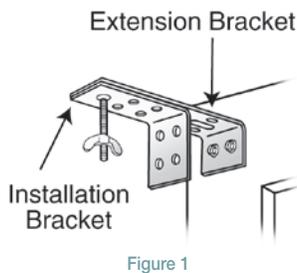

F Cord Tensioner Installation for EasyLift*

1. Lower the shade. Choose one of the three installation methods shown to position the tension device on the window frame or the wall so that the tension device and the control cord do not interfere with shade operation.
2. The control cord must be taut but still operable. Do not allow for any slack. Do not twist or cross the control cord.

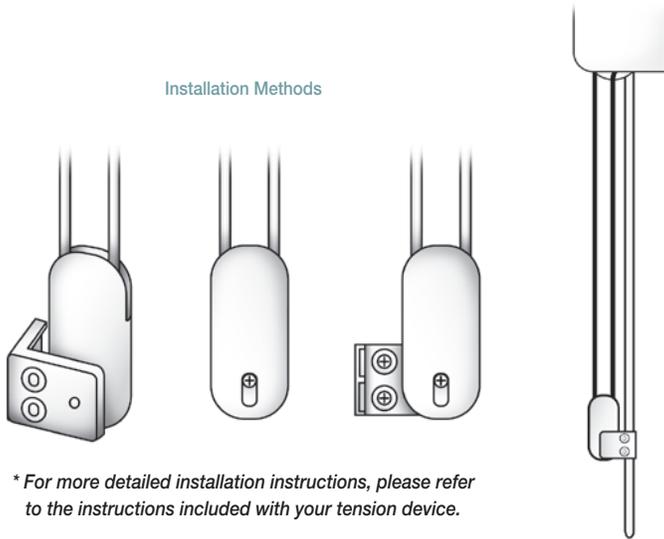

G About Your Woven Wood Shades

Our Woven Wood Shades are made from natural bamboo reeds, dowels and grasses. These materials have natural biases and are not uniform throughout the shade. These imperfections lend to the beauty of these natural weaves. Bamboo has a tendency to change color and size as it ages and the process may accelerate when placed in windows with high exposures to sun.

Child Safety

At Next Day Blinds child safety is first. All of our products are fitted with the highest quality components that provide the most complete safety measures in the industry. Make free-hanging cords inaccessible to young children by securely wrapping cords into cleats when not in use. Cord cleats are available free of charge from Next Day Blinds - just ask.

Cleaning and Care

In order to keep your window treatments looking new, follow the recommended methods for care and maintenance. Regular care will result in better appearance and performance from your window coverings.

www.NextDayBlinds.com | 800.963.9832

Dusting	Hand-Held Vacuum	Compressed Air	Hair Dryer	Spot Cleaning	Water Immersion	Ultrasonic Cleaning
X	X	X	X			