


# Next Day Blinds

## Installation Instructions | Cordless Honeycomb Shades Lift Systems: for Premium Cordless

### A Getting Started

The Parts: Before starting, please remove and identify the following parts required for the installation of your shades:

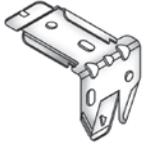


Standard Mounting Bracket



Installation Screws



Spacer Blocks (optional)



Side Mount Bracket (optional)



Hold Down Bracket (optional)

### B The Tools

To install your Next Day Blinds Cordless Honeycomb Shade, you will need a few basic tools:

- Phillips head screwdriver\*, or
- 1/4" nut driver\*


\* Power screwdriver or power drill with #2 Phillips attachment or 1/4" nut driver attachment may be used.

**Important Note:** Screws provided are for installation into wooden frames only. For metal surfaces, use suitable sheet metal screws and pre-drill holes. For concrete, stone, brick, or tile, use a carbide drill and appropriate anchors and screws. For wallboard or plaster, use hollow wall anchors and/or longer screws to reach framing or stud. In all cases, follow the fastener manufacturer's recommendations.

### C Sorting Your Blinds

On top of the headrail of your Next Day Blinds Cordless Honeycomb Shade, there is a sorting label. On this label, you will recognize:

1. Order size of the blind
2. Room location (If not present, info not given at time of order)
3. Whether the blind was ordered for inside mount (IB), or outside mount (OB)

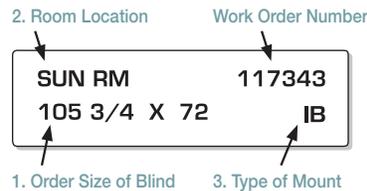


### D Bracket Spacing

Shades are shipped with the required number of brackets for proper installation. End brackets should be located to the outside of the cord spools. Depending on the width of the shade, additional brackets may be necessary, evenly spaced between the two end brackets.

1. Using the Installation Bracket as a template, measure to the edge of the bracket and mark the hole locations with a pencil for drilling. When mounting brackets, make sure they are in line and level. Shim brackets on inside mounts if necessary. The headrail must be level for the shade to operate properly.


Shade Width	Number of Brackets
Up to 40"	2
40" To 72"	3
72" To 84"	4
84" and up	5

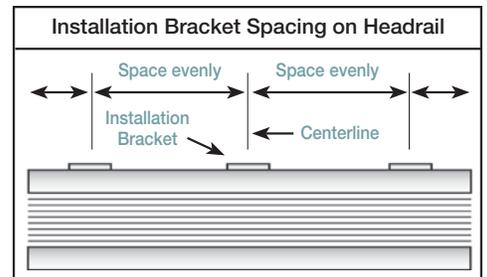

## E Bracket Installation Mounting Options


### Inside or Ceiling Mount

Use the top bracket holes

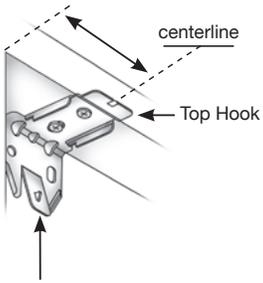


### Outside or Wall Mount

Use the rear bracket holes

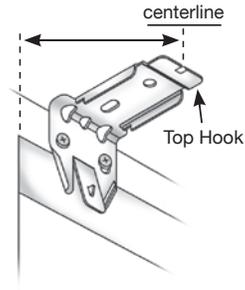


### Outside Mount with Spacer Blocks

Optional spacer block will project bracket 3/8"

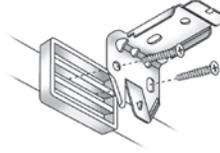


### Side Mount with Extension Brackets

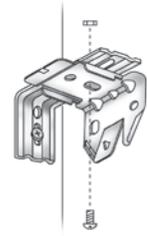


## F Inserting the Headrail

1. First, lower the bottom rail about an inch. This will help keep the fabric from getting caught between the brackets and the headrail.
2. Position the headrail with the front lip resting on the top hooks of all the brackets (Fig. 1). Make sure that no fabric is pinched between the brackets and the headrail.
3. Push the bottom of the headrail firmly upwards and toward the window until the groove at the bottom of the headrail snaps into place, as shown (Fig. 2).

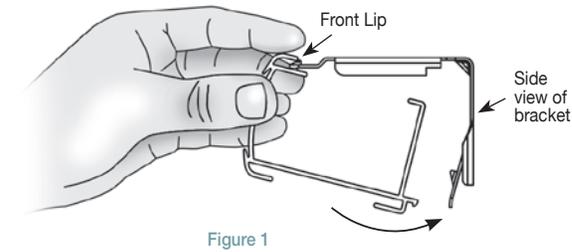


## G Installing the Handle

Locate the center of the bottom rail. Gently lift fabric out of the way. Hook the top of the handle over the front lip on the bottom rail. Rotate handle down until it snaps into place.

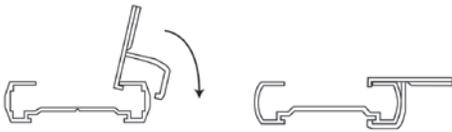


## H Operating Your Cordless Honeycomb Shades

1. To lower the shade, pull down on the handle which is secured to the bottom rail (Fig.1).
2. To raise the shade, push the bottom rail up. The shade will hold at any position when the bottom rail is released (Fig. 2).

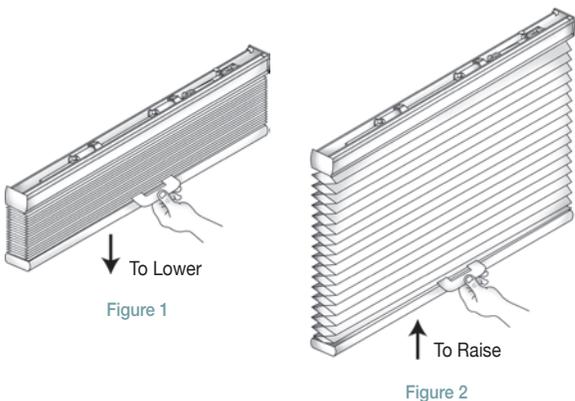

*This product should be operated from the center of the rail. For out-of-reach operations, an optional extension pole should be used. Be sure to raise the shade slowly and steadily to allow the shade enough time to stack evenly. Use handle when raising and lowering shade for better support and smoother operation.*

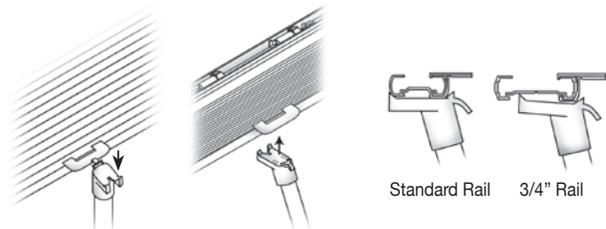

## I Adjust Length or Equalization on Shades

**NOTE:** Only adjust one cord at a time. Disconnecting more than one cord may allow the cords to retract into the headrail.

1. If the shade length and equalization is satisfactory, simply trim the excess cord hanging below the bottom rail.
2. If adjustments are necessary, pull the excess cord at the bottom of the shade down until the Bottom Rail Plug is released (Fig. 1). Push the cord up through the Bottom Rail Plug (Fig. 2).
3. If the cord needs to be longer, slide the bottom end of the cord up into the wedge and slide the wedge down to take up slack.
4. If the cord needs to be shorter, slide the top end of the cord down into the wedge and slide the wedge up to take up slack.
5. Adjust the position of the plug as necessary (Fig. 3).
6. Feed the cord back through the Bottom Rail Plugs (Fig. 4).
7. Push the Bottom Rail Plug back into the Bottom Rail Pocket.
8. When bottom rail adjustments have been made, trim excess cord hanging below the bottom rail.

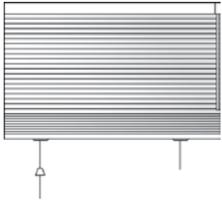


Figure 1

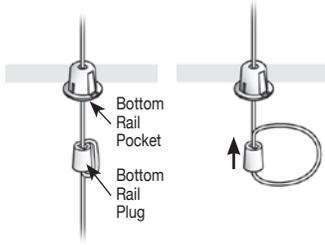


Figure 2

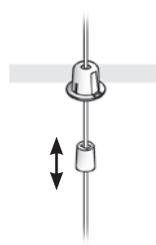


Figure 3


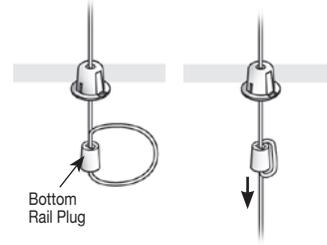


Figure 4

## J Optional Hold Down Brackets


Optional Hold Down Brackets are mounted with the supplied screws.

1. With the shade at its proper drop, place the pin of each Hold Down into the hole in each End Cap and mark the screw holes. Make sure the pins are level and aligned.
2. Raise the shade, then screw the Hold Down Bracket into the mounting surface.

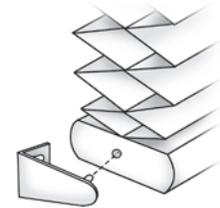

## K Removing the Headrail

1. To remove a shade, insert a screwdriver between the headrail and the bottom back of the bracket (tab which extends out slightly from each bracket).
2. Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail.
3. As you release the brackets, support the headrail to keep it from falling.

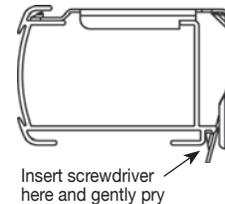

## Child Safety



Next Day Blinds is committed to incorporating the latest and most effective child-safe technologies in our products. Our Cordless Honeycomb Shades have no exposed cording. For more details about Next Day Blinds' commitment to child safety visit [www.nextdayblinds.com/resources/window-covering-safety](http://www.nextdayblinds.com/resources/window-covering-safety).

## Cleaning and Care

In order to keep your window treatments looking new, follow the recommended methods for care and maintenance. Regular care will result in better appearance and performance from your window coverings.

The Honeycomb fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the shade can be removed from the Installation brackets and soaked in warm water.

**IMPORTANT:** Do not immerse headrail in water. When damp, raise shade tightly to re-crisp pleats. Before using anything stronger than mild detergent and lukewarm water, test an unobtrusive corner of the shade. If you have any questions, call your dealer for advice.

[www.NextDayBlinds.com](http://www.NextDayBlinds.com) | 800.963.9832