

# Next Day Blinds


## Installation Instructions | Roller Shades Lift Systems: for EasyLift

### A Getting Started

The Parts: Before starting, please remove and identify the following parts required for the installation of your shades:



Hex Head Screws

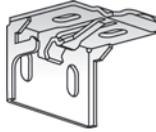


Mounting Brackets



Cord Tensioner



Cord Tensioner to Bracket Screws



Universal Extension Brackets (optional)



Bolts and Nuts (optional)

### B The Tools

To install your Next Day Blinds EasyLift Roller Shades, you will need a few basic tools:


- Measuring tape
- Power drill with 1/4" hex head attachment and/or Phillips Head Screwdriver
- Pencil

**Important Note:** Screws provided are for installation into wooden frames only. For metal surfaces, use suitable sheet metal screws and pre-drill holes. For concrete, stone, brick, or tile, use a carbide drill and appropriate anchors and screws. For wallboard or plaster, use hollow wall anchors and/or longer screws to reach framing or stud. In all cases, follow the fastener manufacturer's recommendations.

### C Sorting Your Blinds

On top of the headrail of your Next Day Blinds EasyLift Roller Shade, there is a sorting label. On this label, you will recognize:


1. Order size of the blind
2. Room location (If not present, info not given at time of order)
3. Whether the shade was ordered for inside mount (IB), outside mount (OB), or side mount (EM)

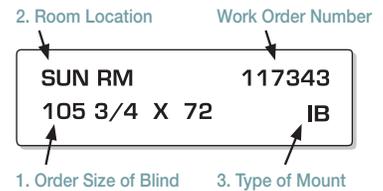


### D Bracket Installation

**Important Note:** Make sure your mounting surface is level. If the headrail does not sit level, the fabric will not roll up evenly which could damage the edges of the fabric.

#### Inside Mount (IB)


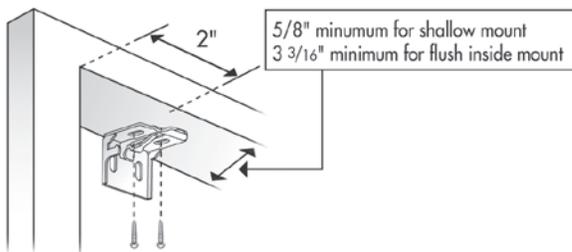


#### Outside Mount (OB)

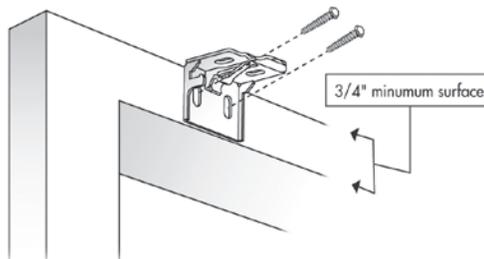



## Outside Mount (OB) with Extension Brackets (Optional)

Extension Brackets are used to project the back of the shades up to 2 1/2" from the mounting surface (Fig. 1). Attach the Standard Mounting Bracket to the Extension Bracket with the nut and bolt provided (Fig. 2).

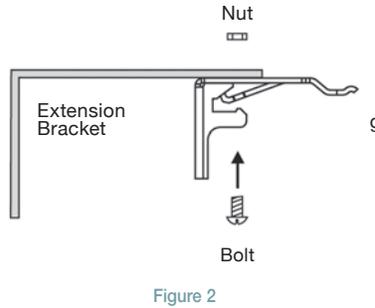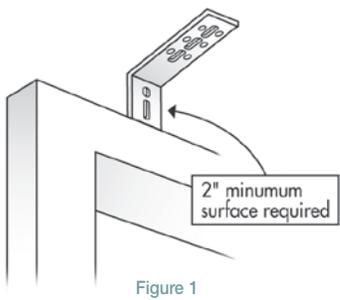

## Side Mount (EM)




1. Position screw in center of slot so you can adjust position of bracket as necessary.
2. Measure from window sill up to desired mounting position on each side of the window frame. Mark position. Mount Side Mount Brackets on each side of window frame as shown (Fig. 1). Make sure to confirm that headrail will sit perfectly level. Once Side Mount Brackets are installed and properly positioned, attach the Standard Mounting Brackets using the nuts and bolts provided (Fig. 2).

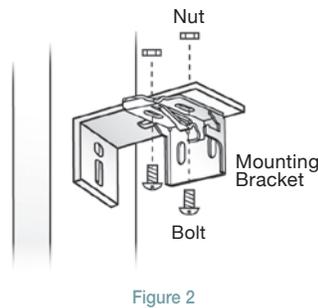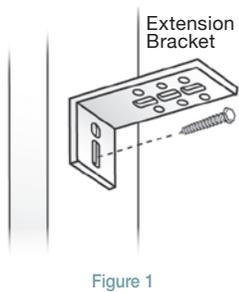

## E Installing Your Roller Shades into the Brackets

The integrated headrail system used on your EasyLift Roller Shade is designed to eliminate the need for a separate snap on valance, and to provide the aesthetic enhancement of concealed brackets.


1. Push the headrail back until it is fully engaged (Fig. 1 and Fig. 2) and snaps into the mounting bracket.
2. To remove shade, partially lower the shade and insert a flat head screwdriver as shown (Fig. 3). Twist the screwdriver until the headrail disengages from the bracket.

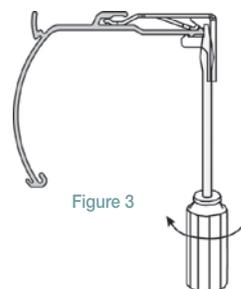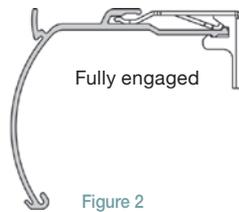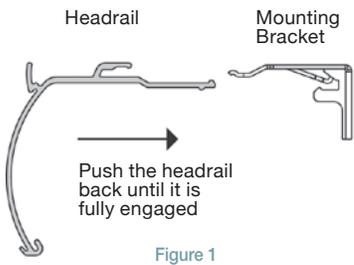


## F Cord Tensioner Installation\*

1. Lower the shade. Choose one of the three installation methods shown to position the tension device on the window frame or the wall so that the tension device and the control cord do not interfere with shade operation.
2. The control cord must be taut but still operable. Do not allow for any slack. Do not twist or cross the control cord.

Installation Methods

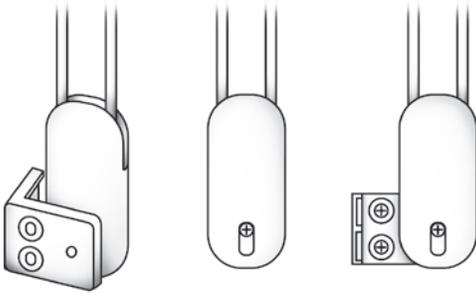

\* For more detailed installation instructions, please refer to the instructions included with your tension device.



### Child Safety

The Consumer Product Safety Commission requires the use of a cord tie down (cord tensioner) on all continuous loop cord systems. The use of such a device is intended to significantly reduce the occurrence of infant or small child strangulation injuries or deaths resulting from the looped pull cords on various window treatment products. The Cord Tensioner is installed on the Lift Cord before packaging. The Tensioning device should be mounted in the proper position to pull the cord taut in order to reduce the possibility of injury.

### Cleaning and Care

In order to keep your window treatments looking new, follow the recommended methods for care and maintenance. Regular care will result in better appearance and performance from your window coverings.

[www.NextDayBlinds.com](http://www.NextDayBlinds.com) | 800.963.9832

Dusting	Hand-Held Vacuum	Compressed Air	Hair Dryer	Spot Cleaning	Water Immersion	Ultrasonic Cleaning
X	X	X	X	X		