

How to measure for Premium Cordless Roller Shades

Step One: Inside or Outside?

INSIDE MOUNT shows off your window trim, but requires sufficient depth to accommodate your chosen window coverings. Inside mounting is ideal for sash (double-hung) windows.

Premium Cordless Roller Shades require 7/8" of depth to install (with headrail) or up to 3 3/4".

INSIDE MOUNT



OUTSIDE MOUNT can give somewhat better light-blocking, but covers up all (Standard) or some (First-Tier) of your window trim. For casement windows (window cranks, locks and screens on the inside), we recommend outside mount to avoid interference with these items.

OUTSIDE MOUNT
STANDARD



OUTSIDE MOUNT
FIRST TIER



Step Two: Measure


For best results, use a steel tape measure and carefully measure to the nearest 1/8".

INSIDE MOUNT

1. Measure width across the top, center and bottom. **Use narrowest width.**
2. Measure length left, center and right. **Use longest length.**
3. Order product Inside Mount

Note: Our Roller Shade fabrics are trimmed narrower than the width you order, a process that ensures smooth operation, but creates a small light gap.


For this reason we strongly recommend a full outside mount for blackout roller shades.

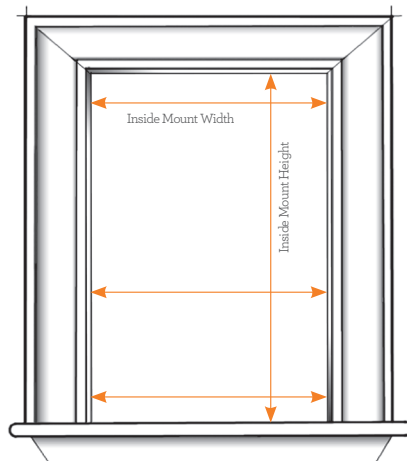

OUTSIDE MOUNT

If you have a standard beveled 2 1/4" trim, or 3 1/2" trim, you have the option of measuring on the first tier of the trim or to the edge of the trim. Edge of trim is recommended for 2 1/4" trim; first tier is recommended for 3 1/2" trim.

1. If measuring to the edge of the trim, measure from edge to edge across the top, middle and bottom for the width, and from the top of the upper trim to the sill (or bottom of lower trim) for the height. **Use longest length.**
2. If measuring in the first tier, measure width from the outer edge of the first tier on one side to the outer edge of the first tier on the other side, measure in 3 places and **use largest width**. For the height, measure from the upper edge of the first tier on top to the sill (or lower edge of the first tier on the bottom).
3. Order product as Outside Mount

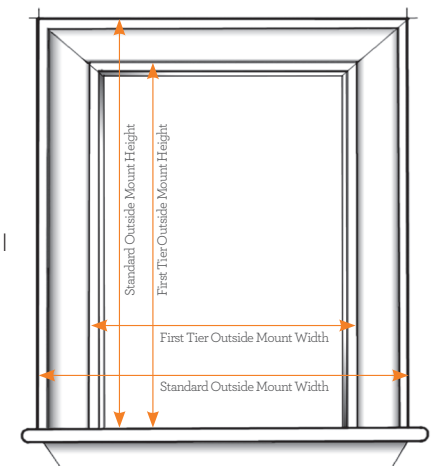

IF YOU HAVE FURTHER QUESTIONS ABOUT MEASURING CALL 800.963.9832.



How to measure for Premium Cordless Roller Shades

CRITICAL DIMENSIONS

Made to order, sized to fit.

	Depth Requirements		Finished Product Size Relative to Ordered Size			
	Inside Mount		Inside Mount		Outside Mount	
	Install	Fully Recess	Headrail Width	Fabric Width	Headrail Width	Fabric Width
No headrail-up to 30" Ordered Width	1 5/8"	2 1/2"	-1/4"	-13/16"	+1/8"	-7/16"
No headrail-30 1/8"+ Ordered Width	1 5/8"	2 1/2"	-1/4"	-1/2"	+1/8"	-1/8"
With Headrail-up to 30" Ordered Width	7/8"	3 3/4"	-1/16"	-1"	+1/16"	-5/8"
With headrail-30 1/8"+ Ordered Width	7/8"	3 3/4"	-1/16"	-11/16"	+1/16"	-5/16"

IF YOU HAVE FURTHER QUESTIONS ABOUT MEASURING CALL 800.963.9832.