

How to measure for Vertical Blinds

Step One: Inside or Outside?

INSIDE MOUNT as a best-application practice, we generally recommend that Vertical Blinds be outside mounted. In certain cases, where window or window casement depth allow, these products may be inside mounted.

Vertical Blinds require 2 3/4" of depth to install or 4" to install fully recessed.

INSIDE MOUNT



OUTSIDE MOUNT vertical blinds are commonly used to cover wide expanse windows and sliding glass doors. In order to properly mount vertical blinds you need at least 1 1/4" flat mounting surface.

OUTSIDE MOUNT
STANDARD



OUTSIDE MOUNT
FIRST TIER




Step Two: Measure

For best results, use a steel tape measure and carefully measure to the nearest 1/8".

INSIDE MOUNT

1. Measure width across the top, center and bottom. **Use narrowest width.**
2. Measure length left, center and right. **Use longest length.**
3. Order product Inside Mount

Note: We will make the necessary deductions approximately 1/2".

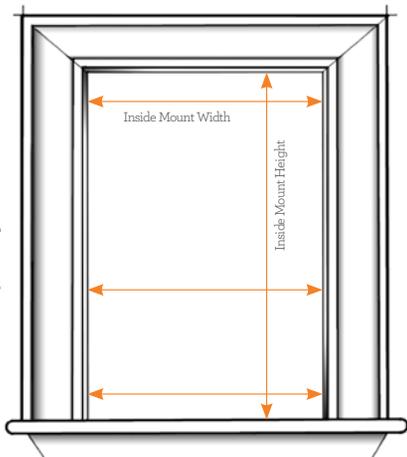

OUTSIDE MOUNT


Sliding doors:

1. Measure the exact width from outside edge of the trim and add a minimum of 4" to each side.
2. Measure the exact height from the top of the trim to the floor and a minimum of 2". The size ordered will be the exact size of the finished product.

Windows:

1. Measure the exact width from outside edge to outside edge of the trim and add a minimum of 4" to each side.
2. Measure the exact height from outside edge of trim to either the top of the sill or the bottom of the window apron (recommended) and add a minimum of 2". The size ordered will be the exact size of the finished product.

For doors and windows with no trim, a 6" overlap on each side is recommended to assure privacy.

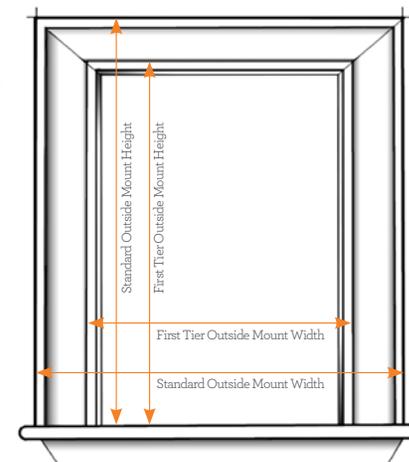

IF YOU HAVE FURTHER QUESTIONS ABOUT MEASURING CALL 800.963.9832.

Made to order, sized to fit.

	Depth Requirements		Finished Product Size Relative to Ordered Size			
	Inside Mount		Inside Mount		Outside Mount	
	Install	Fully Recess	Headrail Width	Valance Width	Headrail Width	Valance Width
Vertical Blinds (Closed Corner Valance)	2 1/2"	5"	-3/8"	-1/4"	-	+3/4"
Vertical Blinds (Rounded Corner Valance)	2 1/2"	5"	-7/8"	-1/4"	-	+1 1/4"